


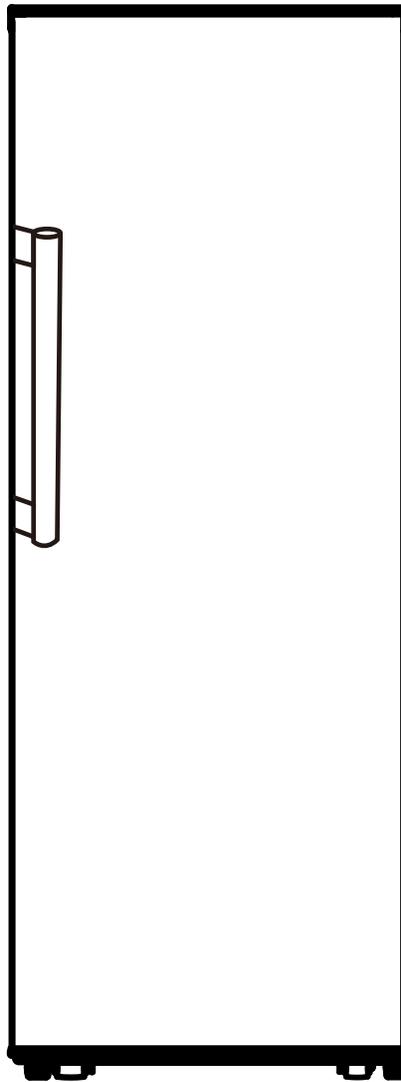

# REFRIGERATOR

MODEL: AX250NXF




# USER MANUAL

**Dear Customer,**

Please read these Operating Instructions carefully before you connect your new freezer as they contain important information on its safe and proper use, installation and care. Please keep the Operating Instructions in a safe place for future reference. Moreover, please pass them on to possible new owners of the appliance.

### **General Description**

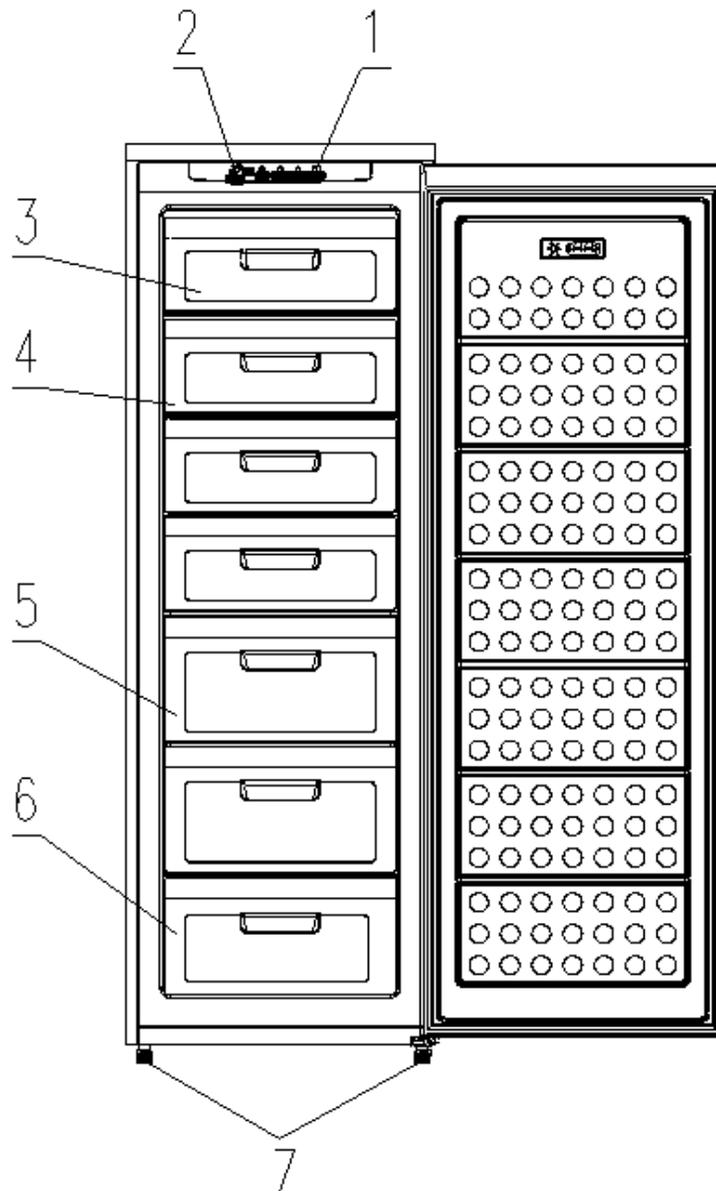

- 1. Super freezer knob
- 3. Drawer flap
- 5. Big drawer
- 7. Adjustable foot

- 2. Thermostat knob
- 4. Mid drawer
- 6. Lower drawer

## Transportation and Handing

When transportation, hold the base and lift the freezer carefully with the tilted angle more than 45 degree. Never hold the door handle as support. Never place it upside down nor horizontal wise nor get it extruded. Push freezer about by making its two hind roller feet as axis and then tilting it slightly during moving indoors.

## Installation

1. Install the freezer at a place with a flat, firm ground directly. In order to prevent vibration and noise.
2. Choose a well-ventilated place. A space of no less than 10cm must be left around the refrigerator.
3. Choose a location where there is no heat source. Keep the freezer away from direct sunlight and oven etc..
4. Choose a dry and well-ventilated place where there is no corrosive air.


## Testing

1. Clean the freezer with lukewarm water and detergent, and wipe dry.

**Notes: Electrical components should be cleaned with a dry cloth.**

2. Turn the thermostat knob to the "MED" position, and plug the freezer into the wall outlet. The compressor will begin to run.
3. Check, after 30 minutes of operation, to ensure that the freezer is cold.

## Temperature Control Panel

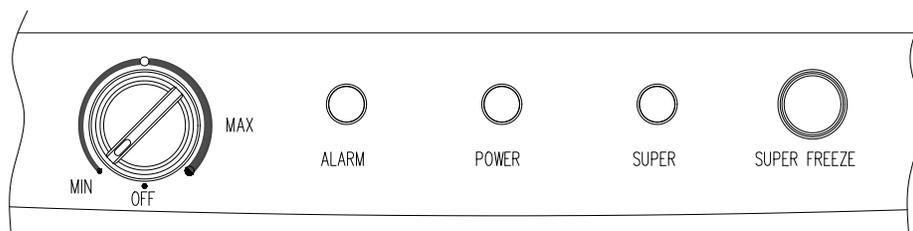

Setting the temperature using the knob located inside the fridge compartment:  
MIN for less cold to MAX for colder

Press super freezer knob, begin to super freezing ; and press again, stop super freezing.

## NOTE:

1. Turning the temperature control to "OFF" position stops the cooling cycle but does not shut off the power to the freezer.
2. If the unit is unplugged, power lost, or turned off; you must wait 3 to 5

minutes before restarting the unit. If you attempt to restart before this time delay, the freezer will not start.

## **Storage of Food**

### **How to Use the Freezer Compartment**

\*Fresh foods such as fish and meat can be frozen to maintain freshness, and keep the nutrients in the food.

\*Food should be wrapped in aluminum foil, or some other type of airtight packing.

\*Do not allow frozen food in freezer to touch foods just placed into freezer. It can damage the food.

\*Frozen foods from the store should be placed in the freezer promptly, so they do not thaw.

\*Never place fresh vegetables and fruits into the freezer as they can get freezer burn.

## **Super Freezing**

\*Super freezing is to protect food from damage by large ice crystals that form when food is frozen at a slow rate. With fast freeze, smaller ice crystals form, which does not penetrate the “cell membranes” of the food. This helps keep the nutrients and freshness of the food

\*Fresh fish and meat, which will be stored for long periods of time, should be fast frozen.

\*To operate super freezing, press the super freezer knob. Once the food is frozen, press again, it will stop.

## **Defrosting**

1. When the freezer operates for a long period of time, the surface of the evaporator and the drawers may become covered with a layer of white frost. This frost will reduce the energy efficiency of the unit, and make the freezer less effective. When this frost forms, it should be promptly removed.

2. When defrosting, unplug the freezer, and remove all items from the freezer. Either allow the frost to melt naturally from the warm air in the room, or carefully use a plastic scraper. Finally, wipe away any remaining ice and water, plug the freezer in, and return the food to the freezer.

**CAUTION: Never use sharp tools to chip ice away.**

**Notes:**

- \*The appliance should be so positioned that the plug is easily accessible.
- \* If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- \* The product is for household use only.
- \*The appliance shall not be used in open air and shall not be exposed to rain.
- \*Don't store something like ether, methanol, gasoline etc., which is easy to evaporate burn or explode.
- \*Don't set something too heavy on the top of freezer and do not pour water on it.
- \*Don't touch frozen food with wet hands, as you can suffer frostbite.
- \*Do connect your freezer to an independent electrical socket and use a safe ground wire. The voltage should be limited within the ranges from 220V to 240V, or the main motor will be damaged.
- \*Do clean freezer after each defrosts.
- \*Turn on electricity only 5 minutes later after electricity goes off. Otherwise, the compressor may be damaged.
- \*In order to save electricity consumption, keep air circulation during operation and the package base should be taken away.
- \*Sure to keep electrical wire away from compressor and condenser, or its insulation function will be spoiled by high temperature.
- \*To save the energy, you should reduce the frequency and duration of the opening of the door.
- \*It is not recommended to use any extension cords.
- \*If your freezer is with lock, to avoid children shut into the freezer, do not leave the key near the freezer or other place easy to be touched by children.
- \*Warning-Keep ventilation openings in the appliance enclosure or in the structure for building in, clear of obstruction.
- \*Warning-Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- \*Warning-Do not damages the refrigerant circuit.
- \* Warning - Do not use flammable appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- \*If the appliance can not be used any more, please release the refrigerant before abandon at a place exposed to the air and away from tinderbox.



### **Correct Disposal of this product**

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

### **General Instructions for Care and Maintenance**

The freezer should be cleaned every other month, before cleaning, the electric plug must be removed from the power supply.

Wipe the inside and outside of the freezer with a wet soft cloth.

If it's too dirty, clean with a soft cloth soaked with neutral detergent and clean water, remove the moisture with dry cloth.

If you are going away on holiday or for any other reason, wish to leave the freezer idle for any period of time, proceed as follows:

\*Disconnect the freezer from the electric power supply by removing the plug from the wall socket.

\*Remove all food.

\*Clean and dry the inside as instructed in the direction given above for cleaning.

\*Leave the doors open to prevent any unpleasant smells from building up while the refrigerator is not used.

### **Cleaning:**

\*When cleaning the freezer the electric plug must be removed from the power supply.

\*Use water and a non-abrasive detergent.

\*Clean with a soft cloth soaked in this solution and remove moisture with a dry cloth.

### **Working Defects and Failures**

#### **Symptom:**

**Appliance will not work at all.**

#### **Cause:**

The power supply plug is not inserted in the wall socket or the plug and the outlet is loose.

Due to some anomaly in the household electric supply circuit, no power is reaching the freezer supply socket. This can be checked by plugging in a light or any other electric appliance into the suspect socket.

The voltage is too low.

**Symptom:**

**Noisy running.**

**Cause:**

The appliance has not been properly leveled.

The freezer contact with the wall.

The accessories in the freezer are placed wrong position.

**Symptom:**

**Appliance does not cool sufficiently.**

**Cause:**

Door has been opened too often, or it has been left open for a while.

The freezer is too near to the wall.

Too much food in the freezer.

Have not regulated the temperature correctly.

**Smell inside the appliance.**

**Cause:**

Some of the food is not properly wrapped or covered.

The inside of the refrigerator needs cleaning.

If your refrigerator shows other symptoms from those described above, or if you have check all items listed as the causes and the symptom still exist, then call the service department.

**NOTE: The following are normal operation. These are not indications of improper operation.**

1. Refrigerant may make a gentle sound similar to running water.
2. In humid areas, some moisture may gather on the outside of the freezer. Just wipe away.
3. The compressor becomes very hot. Do not touch the compressor.
4. Heat around the door frame is normal.

**Adexa Direct Limited  
UNIT 1 SWIFT POINT  
COSFORD LANE  
SWIFT VALLEY INDUSTRIAL ESTATE  
RUGBY CV21 1QN UK  
service@adexa.co.uk**