

**OPERATING INSTRUCTIONS
OUTDOOR CHARCOAL GRILL
(Drawings for reference only)**

Model No.: CC1830F

Description: Charcoal BBQ grill



**⚠ WARNING
FOR YOUR SAFETY
FOR OUTDOOR USE ONLY
(OUTSIDE ANY ENCLOSURE)**

Read this instruction carefully and ensure that your grill is properly installed, assembled, maintained and serviced in accordance to these instructions. Failure to follow these instructions may result in serious bodily injury and/or property damage. If you have any questions concerning the assembly or operation of this barbecue, please consult your dealer, your gas supplier, the manufacturer or agent.

Notes to the user:

“READ THE INSTRUCTIONS BEFORE USING THE APPLIANCE”.

“USE OUTDOORS ONLY”.

“WARNING ACCESSIBLE PARTS MAY BE VERY HOT. PLEASE KEEP YOUNG CHILDREN AWAY”.

“RETAIN FOR FUTURE REFERENCE”.

“DO NOT MOVE THE APPLIANCE DURING COOKING”

When using liquid starters always check ash catcher before lighting. Fluid can collect in the ash catcher and could ignite, resulting in a fire below the bowl. Remove any fluid from the ash catcher before lighting charcoal. Consider using non-liquid charcoal starters. Consider using non-liquid charcoal starters.

WARNING

For Your Safety

This grill has been made to high quality standards.

NOTE: The use and installation of this product must conform to local codes.

IMPORTANT NOTICE: read all instructions prior to assembly and use.

Read and understand all warnings and precautions prior to operating your grill.

CAUTION

1. This grill is for use with charcoal only.
2. Do not attempt to move the grill while it is lit.
3. Do not use the grill unless it is completely assembled and all parts are securely fastened and tightened.
4. Keep all combustible items and surfaces at least 36 inches (91.4cm) away from grill at all times.
5. DO NOT use this grill near unprotected combustible constructions.
6. Do not use in an explosive atmosphere. Keep grill area clear and free from combustible materials, gasoline and other flammable vapors and liquids.
7. Do not touch metal parts of grill until it has completely cooled (about 45 minutes) to avoid burns, unless you are wearing protective gear (BBQ mittens, pot holders, etc.)

WARNING

1. This grill is for outside use only, and should not be used in a building, garage or any other enclosed area.
2. The use of alcohol, prescription or non-prescription drugs may impair the operator's ability to properly assemble or safely operate the grill.
3. Always open grill lid slowly and carefully as heat and steam trapped within the grill can burn you severely.
4. Always place your grill on a hard, level surface far away from combustibles. An asphalt or blacktop surface may not be acceptable for this purpose.
5. Do not leave a lit grill unattended. Keep children and pets away from the grill at all times.
6. Do not place this grill on any type of tabletop surface.
7. Do not use the grill in high winds.

LIGHTING AND CONTROLLING THE FIRE

To light your grill:

1. Open lid, as well as all butterfly dampers.
2. Remove cooking grates and raise charcoal pan to its highest setting using the crank.
3. Pour 2.5kg max. of regular charcoal briquets into the charcoal pan and make into a pile.
4. Lower the charcoal pan to its the lowest setting using the crank, and light fire.
5. After charcoal is ashed over, using long-handled tongs to spread charcoal into a single layer on the charcoal pan.

PLEASE PAY ATTENTION

1. The barbecue has to be installed on a secure level base prior to use.
2. The barbecue shall be heated up and the fuel kept red hot for at least 30 min prior to the first cooking.
3. Do not cook before the fuel has a coating of ash.
4. WARNING! This barbecue will become very hot, do not move it during operation.
5. Do not use indoors!
6. WARNING! Do not use spirit or petrol for lighting or re-lighting! Use only firelighters complying to EN 1860-3!
7. WARNING! Keep children and pets away.