



Service Cellar

CW-52FD

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS..... 1

INSTALLATION INSTRUCTIONS..... 4

CLEANING AND MAINTENANCE..... 5

PRODUCT DESCRIPTION..... 6

TECHNICAL SPECIFICATIONS..... 7

USE YOUR SERVICE CELLAR..... 8

BREAKDOWNS AND SOLUTIONS..... 10

**THIS PRODUCT IS FOR HOUSEHOLD
USE ONLY!**



**Please read these instructions carefully
before the first use of this product and
save this manual for your future
reference.**

IMPORTANT SAFETY INSTRUCTIONS

This warning is only for EUROPEAN market only!

**When using an electrical appliance, basic precautions
should always be followed, including the following:**

- 1. WARNING: When positioning the appliance, ensure
the supply cord is not trapped or damaged.**
- 2. WARNING: Do not locate multiple portable socket-
outlets or portable power supplies at the rear of the
appliance.**
- 3. Children aged from 3to8 years are allowed to load
and unload refrigerating appliances.**
- 4. WARNING: Do not use electrical appliances inside the
food storage compartments of the appliance, unless
they are of the type recommended by the
manufacturer.**
- 5. This appliance is intended to be used in household
and similar applications such as**
 - Staff kitchen areas in shops,offices and other
working environments;**
 - Farm houses and by clients in hotel, motels and
other residential type environments;**

- 6. Please keep the products away from the fire or similar glowing substance before you dispose the refrigerator.**
- 7. Please remove the door before you dispose your refrigerator.**
- 8. The appliance shall not be installed in the laundry.**
- 9. The appliance must be positioned so that the plug is accessible.**
- 10. The appliance shall be installed in accordance with national wiring regulations.**
- 11. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.**
- 12. This appliance can be used by children aged from 8 years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and use maintenance shall not be made by children without supervision.**
- 13. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**
- 14. To avoid contamination of food, please respect the following instructions:**
 - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.**

-If the refrigerating appliance was left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance

- 15. DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.**




- 16. This refrigerating appliance is not intended to be used as a built-in appliance.**

- 17. This refrigerating appliance is not suitable for freezing foodstuffs.**

- 18. WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.**

- 19. WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.**

- 20. WARNING: Do not damage the refrigerant circuit.**

- 21.  Warning: Risk of fire / flammable materials. There are flammable materials at the back of appliance, please keep the product far away fire source.**

INSTALLATION INSTRUCTIONS

Before putting your service cellar into service

- **Remove all inner and outer packaging components.**
- **Check that none of the following parts are missing:**
 - **3 removable shelves**
 - **1 operating manual**
- **Before connecting your device to a power supply, allow it to stand upright for about 2 hours. This reduces the risk of malfunction of the refrigeration system due to handling during transport.**
- **Clean the inner surfaces of the unit with a soft cloth and warm water.**
- **Place your unit on a floor strong enough to support the weight of the fully filled unit.**
- **Make sure the unit is level by adjusting the front feet underneath the unit. Make sure that the cellar rests on its feet in a stable manner.**
- **Install the appliance away from direct sunlight and heat sources (radiator, hot plate, etc.). Direct sunlight can damage the unit's coating and heat can increase its power consumption. If the ambient temperature is extremely cold or hot, this may prevent the unit from operating properly.**
- **The unit is not designed to be installed in a basement or cellar.**
- **This unit is designed exclusively for indoor use.**

Caution: Make sure that the unit is kept away from any substance that may cause combustion.

- **Check that the water tank is in place before connecting the unit.**

CLEANING AND MAINTENANCE

 
Cleaning your service cellar

- **Unplug your service cellar and take out all the bottles.**
- **Clean the outside of the unit with hot water and a mild detergent.**
- **Remove the water tank at the bottom of the unit, then was hit.**

Moving your service cellar

- **Remove all bottles and disconnect the service cellar.**
- **Tape all loose parts inside your service cellar.**
- **Turn the feet to adjust their height to the minimum to avoid damage.**
- **Tighten the door to keep it closed.**
- **Be sure to keep the service cellar upright during transport.**

PRODUCT DESCRIPTION

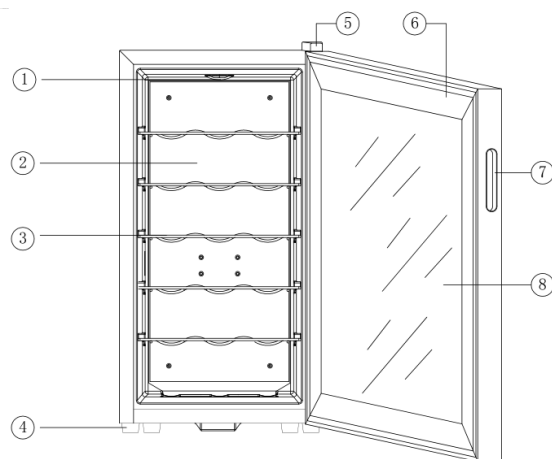

1.Lighting

2.Aluminum Plate

3.Shelf

 
4.Feet

5.Upper Hinge

6.Door Gasket

7.Recessed Handle

8.Glass Door

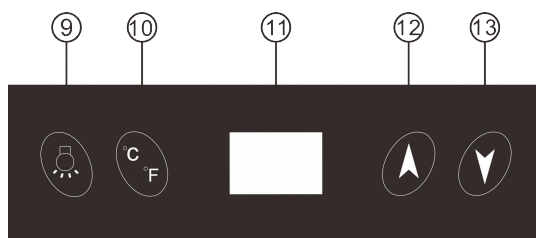

9. Lighting Switch

10. Temperature selector switch

11.Temperature Display

12.Temperature up switch

13.Temperature down switch

TECHNICAL SPECIFICATIONS

Reference :	CW-52FD
Rated voltage :	220-240V~
Ampere :	0.55A
Rated frequency :	50Hz
Climate class :	N
Rated frequency :	R600a (31g)
Protection against electrical shock :	I
Insulation foam :	CYCLOPENTANE

Climate class:

- **Extended temperate(SN):** 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 10 °C to 32 °C';
- **Temperate(N):** 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C';
- **Subtropical(ST):** 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C';

- Tropical(T): 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 43 °C';

Note: More data information, please scan the QR code on the energy label.

USE YOUR SERVICE CELLAR

The temperature setting allows you to adjust it according to your needs:

**Setting temperature before tasting red wines:
Temperature recommended 16-17°C.**

If the ambient temperature is higher or lower than the recommended temperatures, this will have a negative impact on its performance. For example, placing the unit in an extremely cold or hot place can cause variations in the internal temperature of the unit.

The internal temperature may vary depending on the location of the bottles, at the top, middle or bottom.

 
Adjustment may be necessary depending on the ambient temperature.

Do not hesitate to leave a thermometer inside the cellar in order to carry out regular monitoring.

This service cellar is designed for the maximum storage of 18 standard size (75cl) bottles of wine.

Temperature setting:

- The keys **▲** and **▼** allow you to increase or decrease the temperature in increments of 1°C (the temperature range is 11~18°C)
- The button **☹** allows you to switch the interior lighting on and off.

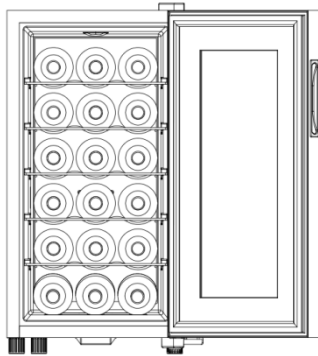

To minimize energy consumption, be sure to respect the filling capacity of your service cellar—18 « Bordeaux 75cl » size.

The combination of drawers, baskets and shelves that result in the most efficient use of energy for the appliance.

The chart indicates the ideal storage temperatures for different types of wines:

Red wines	15°C ~ 18±1°C
Dry/White Wines	10°C ~ 15°C
Vintage Wines	13°C

BREAKDOWNS AND SOLUTIONS


Some malfunctions can be easily resolved. Before calling customer service or a repairer, please consult the following table:

PROBLEM	POSSIBLE CAUSES & SOLUTIONS
The service cellar does not work.	<p>Not connected.</p> <p>The circuit-breaker is tripped or the fuse is damaged.</p> <p>Check if the outlet is powered by connecting another electrical device.</p>
The service cellar is not cold enough	<p>Check the temperature setting.</p> <p>High ambient temperature may require setting the service cellar to a colder temperature.</p> <p>The door is being opened too often.</p> <p>The door is not completely closed.</p> <p>The door seal is not properly positioned.</p> <p>Not enough space around the service cellar to allow ventilation.</p>

<p>The device operates continuously</p>	<p>The room temperature is higher than the maximum supported.</p> <p>A large number of bottles inside the service cellar.</p> <p>The door is being opened too often.</p> <p>The door is not completely closed.</p> <p>Temperature control is not calibrated correctly.</p> <p>The door seal is not properly positioned.</p>
<p>The light doesn't work.</p>	<p>The service cellar is not plugged in.</p> <p>The circuit-breaker has been tripped or a fuse is damaged.</p> <p>The LED lighting is out of order.</p> <p>The light button is set to «OFF».</p>
<p>Vibrations.</p>	<p>Check to make sure the service cellar is level.</p>
<p>The service cellar seems to be making too much noise.</p>	<p>The service cellar is not level, or a foot is incorrectly adjusted.</p>

<p>The door does not close properly.</p>	<p>The service cellar is not level.</p> <p>The shelves are out of position and blocking the door closure.</p>
<p>Water under the device</p>	<p>Water is being collected incorrectly in the water tank on the back of the unit.</p> <p>Check that the water tank is in place.</p> <p>Empty the water tank.</p>

We decline liability for any damage or accident derived from any use of this product which is not in conformity with the instructions contained in this booklet.

CORRECT DISPOSAL OF THIS PRODUCT	
	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environment safe recycling.</p>

