


# Operating Instructions

Meat Grinder

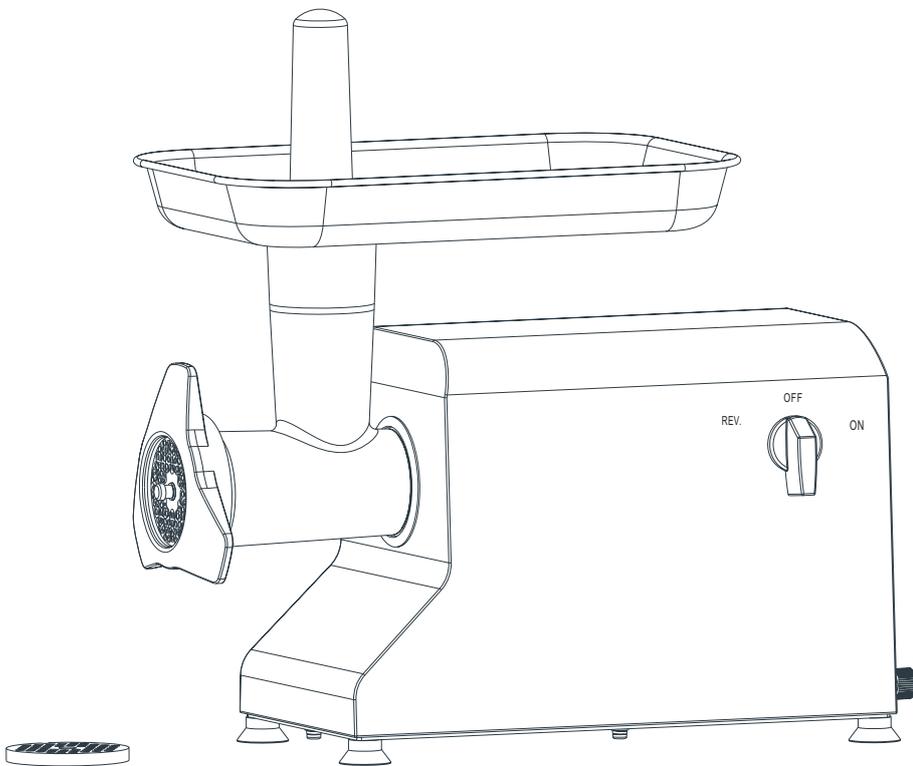

Before operating this unit, please read instructions completely.

# IMPORTANT SAFEGUARDDS

When using electrical appliances, basic safety precautions must always be followed ,including the following:

1. Read all instructions, and save it for future reference.
2. Before use, check that the voltage of wall outlet corresponds to the one shown on the rating plate.
3. Unplug from the outlet when not in use, before putting on or taking off parts, and before cleaning. Clean motor housing with wet cloth, and wipe dry. Don't dip in water for rinse.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Colse supervision is necessary for any appliance being used by or near children.
6. Never let children operating the appliance at unattended.
7. Do not operate any appliance with a damaged supply cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
8. Never reach into the feeding tube with your fingers or an object while the appliance is running. Only use the pusher for this purpose.
9. Don't let supply cord hang over edge of table or worktop, or touch hot surface.
10. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid hazard.
11. Make sure all parts are correctly assembled and the locking knob has been locked before you switch on the appliance.
12. Switch off the appliance before changing accessories or approaching parts which move in use.
13. Keep hands, hair, clothing, as well as scraper and other utensils away from juicer during operation to reduce the risk of injury to persons, and damage to the juicer.
14. Reverse function is prohibited while the appliance is operating (For example switch "ON" knob to "REV." knob or on the contrary), wait at least 6 seconds until appliance has complete stop, otherwise it may cause an abnormal noise, vibration or a transitory electric spark in the appliance. It could result easily damage to appliance and make a user frightened.
15. Only switch off, unplug the power and the appliance is completely stopped, to remove the parts.
16. The appliance with blade very sharp, please properly stored in out of the reach of children.
17. Do not use hard food and bones into the head.
18. Do not grind ginger and other materials with hard fiber.
19. The appliances with thermostat, power off automatically when the motor overheating, after temperatures drop down to resume operation. When the appliances in overheating stop running, please switch to "OFF" position, after fully cool down at operate. We suggest an operating time not more than 1 hour.
20. Do not immerse the motor housing in water or any other liquid, nor rinse it under the tap.
21. Do not clean the parts in the dishwasher.
22. This appliance is fitted with a safety feature which safeguards against excessive loads. In case excessive loads, the appliance automatically activates the overload protection and switches itself off. If this occurs, set switch to "OFF" position, unplug the appliance and allow it to cool down for 30 minutes. Then press the overload protection button on the bottom of the motor housing.

## SAVE THESE INSTRUCTIONS



### Before use

Make sure that the voltage and frequency indicated on the bottom plate are the same as your local supply, and that the external earthed wire is reliable connected.

Wash all the parts (except those that do not touch foods ① ② and ③ ) in warm soapy water. Before plugging in, ensure Switch is off.

# Parts identification

- a Screw Cap
- b Cutting plate (coarse)
- c Cutting plate (medium)
- d Cutting blade
- e Feed screw
- f Head
- g Hopper plate
- h Food pusher
- l Locking knob
- j Motor housing
- k Switch

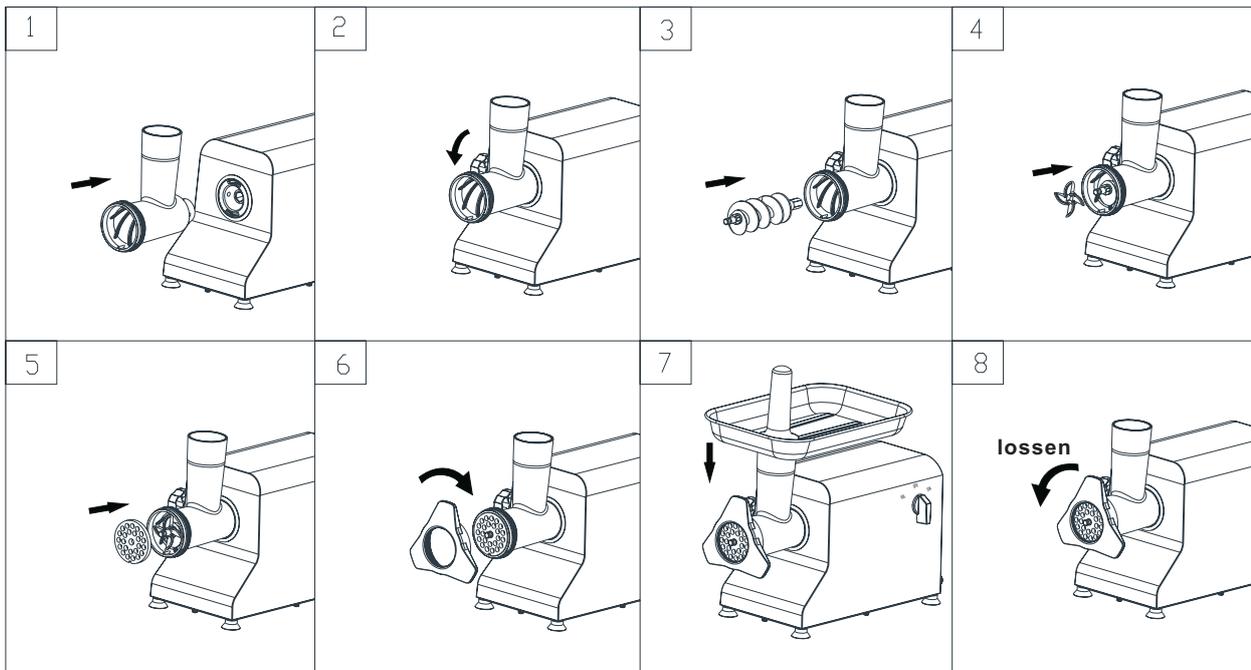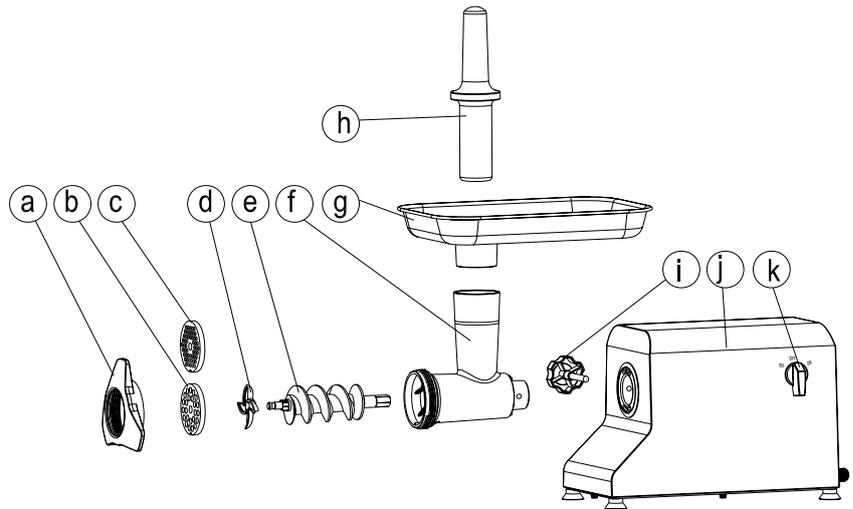

## To mince meat

(Assembling)

- 1 Place Head tightly onto Opening of Motor Housing.
- 2 Holding Head with one hand, tighten Locking Knob clockwise.
- 3 Place Feed Screw into Head, long end first, by turning Feed Screw slightly until it is set into Motor Housing and cover the transmission shaft.
- 4 Place Cutting Blade onto Feed Screw shaft with the blade facing the front as illustrated.  
If it is not fitted properly, meat will not be ground.
- 5 Place desired Cutting Plate next to Cutting blade, gap align the pin of head.

## To mince meat

### 6 Screw Cap into place until tight.

Do not over tighten.

Place Hopper Plate on Head and fix into position.

Locate the unit on a firm place.

The air passage at the bottom and the side of Motor Housing should be kept free and not blocked.

(Mincing meat)

Cut all foods into pieces so that they fit easily into Hopper opening.

Plug in, then switch on.

### 7 Feed foods into Hopper Plate.

Use Food pusher.

After use, switch off and unplug.

#### NOTE:

If the minced meat is not discharged smoothly or in the form of paste, the causes and remedies could be:

③ Screw Cap is tighten too much thus, the Cutting Blade does not contact properly with the Cutting Plate. Readjust it.

③ The Cutting Plate is blocked. Clean it.

③ Cutting Blade edges is dull. Grind or replace it.

## Jamming

When the motor is locked, or when the motor continues to function but no meat comes out of Cutting Plate, due to jamming of bone or other materials that stop the motor, switch off.

Do not switch on.

Turn Switch to REVERSE to clear jamming of bone or other materials.

Clean the unit. (See "To clean below")

## To clean

### (Disassembling)

Make sure that the motor has stopped completely. Disconnect the plug from the power outlet.

8 Screw Cap sides are 3 planes , convenient for unscrewing. If Screw Cap is too tight, please knock at the planes with a soft-handle , then Screw Cap will be unscrewed easily.

Unscrew the Locking Knob, and take out Head (with Cutting Plate, Cutting Blade and Feed Screw), then put Head mouth downward in order to take out Cutting Plate, Cutting Blade and Feed Screw.

### (Cleaning)

Remove meat, etc.

Wash each part in warm soapy water.

A bleaching solution containing chlorine will discolor aluminum surfaces.

Thinners and benzines will crack or change the color of the unit.

Do not immerse Motor Housing in water, but only wipe it with a damp cloth.

A little salad oil on (b)~(e) after washing and drying will keep them lubricated.

Care is need when handing cutting blade during cleaning.

Don't use a perforated disc with holes of  $\geq 8$ mm diameter or smallest with unless an additional protective hood is provided at the discharge outlet.

## Technical Specifications

Speed of blade	140r/min
Motor	Input Power 550W
Power supply	Local Supply 120V 60Hz
Dimensions/CTN	52X25 X32 cm
Gross Weight	12.3kg

Manufacturer:

Guangzhou Sunmile Electric appliance Manufacture Corp.,Ltd.

Address:

Yunpu Industrial Park, Luogang District Guangzhou City, Guangdong, P.R.China.