


Adexa

Electric Food Warmer Manual

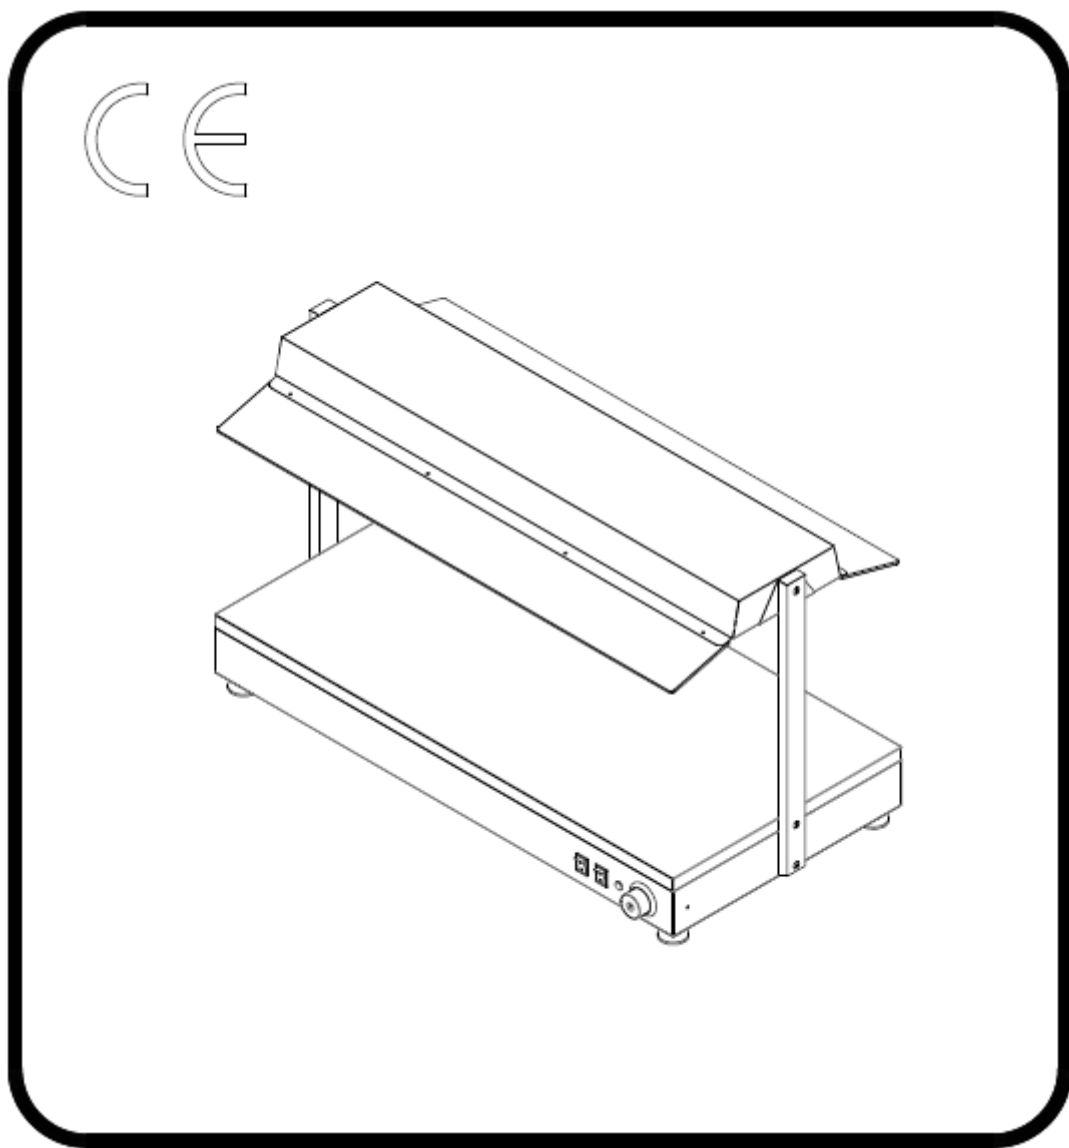

Please read this instruction manual carefully before operating this equipment.

First of all, thank you very much for choosing our products.

If there is a special structure, additional specified options or changes due to new technology, the actual scope of supply may deviate from the description and instructions mentioned here. If you have any questions, please contact the manufacturer.

In order to give full play to the performance of this product and reduce unnecessary losses and injuries, please read the operating instructions carefully before turning on any operation on the device, especially before starting the machine.

The manufacturer does not assume any responsibility for damage or negligence caused by non-compliance with the operating instructions.

This manual should be placed directly on the device so that those who operate the machine can easily read it. Within the scope of improving performance characteristics and further development, we have the right to reserve technical changes to the product.



Warning

1. Any modification, as well as incorrect installation, adjustment, repair or maintenance may result in property damage or personal injury. If adjustment or repair is required, please contact the supplier and be carried out by trained professionals.
2. For your safety, please do not store or use flammable and explosive gases, liquids or objects near this product.
3. This equipment should not be used by people (including children) who have physical, sensory, or psychological impairments or lack experience or knowledge (including children), unless someone supervises their safety or gives instructions on how to operate the machine.
4. Please supervise the children to ensure that they do not play with the equipment.
5. Please store the operation guide carefully. If the machine is used by a third party, please deliver the operation guide together. All users of the machine must adhere to the operation guide information and safety guidelines.
6. Do not store or use flammable and explosive gases, liquids or objects near the place of use.
7. If the machine is located close to walls, partitions, kitchen equipment, decorative panels, etc., it is recommended that these equipment and facilities be made of non-combustible materials, otherwise they should be covered with appropriate non-combustible insulation materials, and pay close attention to fire protection regulations.



Catalog

I. Product Introduction	4
II. The Basic Parameters of The Product	4
III. Explanation of Symbols	4
IV. Working Principle	5
V. Notes.....	6
VI. Instructions for Use	6
VII. Daily Inspections.....	7
VIII.Cleaning and Maintenance	7
IX. Fault Analysis and Troubleshooting	8
X. Packing List	8

I. Product Introduction

The body of the SFW-series electric food warmer is made of high-quality stainless steel, and high-quality electrical components are selected. It has a constant temperature function and is easy to operate. SFW-series electric food warmer has complete functions and high quality. It is the first choice for hotels, bars, western restaurants, fast food restaurants and other places.

II. The Basic Parameters of The Product

Model	Using Electric	Rated input power (kW)	Dimensions (mm)	N.W.(kg)	Remark
SFW-2S	230V~50Hz	1.1	740*530*590	15	
SFW-3M	230V~50Hz	1.55	1040*530*590	19.5	
SFW-4L	230V~50Hz	2.05	1240*530*590	22.5	

III. Explanation of Symbols

In this manual, symbols are used to highlight all important safety instructions and recommendations related to the equipment. To avoid accidents, personal injury, or property damage, please pay special attention to these instructions.



Equipotential



Ground wire




High temperature

IV. Working Principle

1、SFW-2S/SFW-3M

220~240V 50Hz

Power<2kW

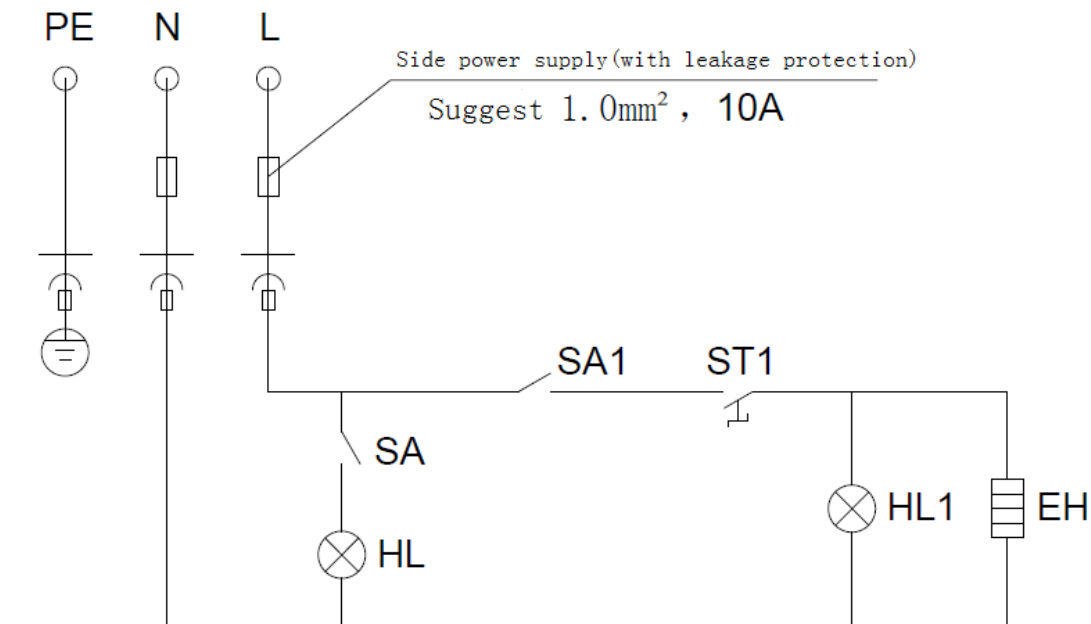


ST1: Thermostat HL1: Heating indicator EH: Electric heating element SA1: Work switch

SA: Tungsten lamp switch HL: Tungsten lamp

2、SFW-4L

220~240V 50Hz

2kW ≤ Power < 3.2kW

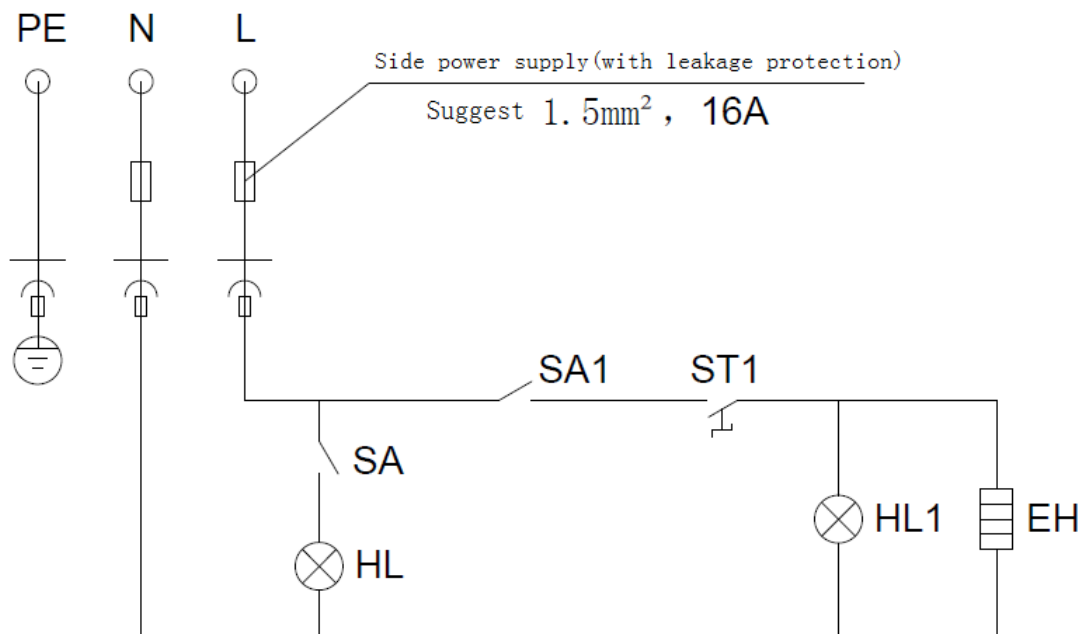

ST1: Thermostat HL1: Heating indicator EH: Electric heating element

SA1: Work switch SA: Tungsten lamp switch HL: Tungsten lamp

V. Notes

1. This manual is not applicable to people who have physical, sensory and intellectual defects, or lack of experience and knowledge.
2. It is strictly forbidden to place flammable and explosive materials around the machine, and a good ventilation environment should be maintained.
3. When using the machine, non-workers should not approach and do not allow children to touch the panel to avoid scalding.
4. When the machine is not in use, unplug the power plug or cut off the power switch to avoid accidents.
5. All maintenance work must be performed after cutting off the power supply.
6. If the machine fails, including the power cord is damaged, do not disassemble it by yourself. Please send it to our company's special maintenance department or dealer for repair.

VI. Instructions for Use

Before use, check whether the power supply voltage is consistent with the nameplate, and whether the user's power switch and fuse meet the power requirements of the machine. The case must be reliably grounded.

Use Step

1. First install the four feet, fix the light box bracket and light box on the body, and connect the red and black beer wiring connectors.
2. Place the machine firmly, place the tungsten lamp switch and work switch at the "OFF" position, and set the thermostat at the zero position; turn on the power, press the work switch to the "ON" position, and the work switch light will light up. Adjust the thermostat knob to the required working temperature. At this time, the orange working indicator lights up and the heating tube starts to be energized and heated. When the temperature reaches the set value, the orange heating indicator light goes out, and the electric food holding station automatically enters a constant temperature state. The user can put food on the panel, and the user can adjust the temperature of the panel as needed.
3. Users can choose tungsten lamps according to the actual situation. Press the tungsten lamp switch to the "ON position", the tungsten lamp is on, and press it to the "OFF" position, the tungsten lamp does not light up, and the tungsten lamp plays a role in lighting and heat preservation.
4. When you stop using it, turn the thermostat knob to the zero position, place the tungsten light switch and work switch at the "OFF" position, and turn off the power at the same time.



VII. Daily Inspections

1. Routine inspections must be carried out frequently.
2. Check the product frequently to prevent serious accidents.
3. Stop using it when you feel the circuit or machine is malfunctioning.
4. Pay attention to check the status of the machine before and after use every day.

Before use	Is the machine tilted? Is the control panel broken? Is the power cord aged, cracked or damaged?
During use	Any peculiar smells, odors, or vibrations? Is the temperature out of control or leakage?

VIII. Cleaning and Maintenance

1. Before cleaning, the power supply should be cut off to prevent accidents.
2. After working every day, clean it with cloth in time and wipe it with neutral detergent if necessary. At the same time, it is strictly forbidden to directly flush the machine with water, so as to avoid damage to the electrical components and cause personal safety accidents.
3. If not in use at any time, the thermostat and power switch should be turned off.
4. When not in use for a long time, the machine should be cleaned and placed in a well-ventilated warehouse without corrosive gas.

IX. Fault Analysis and Troubleshooting

Failure phenomenon	Cause	Method of exclusion
Turn on the power, press the work switch to the "ON" position, the work switch does not light up	1. The power supply is abnormal and the power is not connected 2. The fuse is blown 3. The working switch is damaged	1. Check the power supply and connection lines to make the power supply normal 2. Replace the fuse 3. Replace the work switch
Turn on the power, press the work switch to the "ON" position, the work switch is on, turn the thermostat, the heating indicator light is on, but it does not heat up	1. The heating tube is blown out	1. Replace the burnt out heating tube
Turn on the power, press the work switch to the "ON" position, the work switch will light up, turn the thermostat, the heating indicator light will not light up, but the temperature will rise	1. The heating indicator is damaged	1. Replace the heating indicator
Turn on the power, press the work switch to the "ON" position, the work switch will light up, turn the thermostat, the heating indicator will not light up, but it will not heat up	1. The thermostat is damaged	1. Replace the thermostat
Turn on the power, press the tungsten light switch to the "ON" position, the tungsten light switch light is off	1. The tungsten light switch is damaged	1. Replace the tungsten lamp switch
Turn on the power, press the tungsten light switch to the "ON" position, the tungsten light switch light is on, the tungsten light is off	1. Poor contact between the tungsten lamp and the lamp holder 2. The tungsten lamp switch is damaged	1. Adjust the contact position of the tungsten lamp and the lamp holder 2. Replace the tungsten lamp switch

The above fault items are for reference only. If any fault occurs, stop using it immediately and notify professional technicians for inspection and repair as soon as possible!

X. Packing List

Model	Name Qty.	Electric Food Warmer	Feet	Lamp Box	Manual	Inspection Certificate
	SFW-2S	1	4	1set	1	1
	SFW-3M	1	4	1set	1	1
	SFW-4L	1	4	1set	1	1

PROVISIONAL DECLARATION OF CONFORMITY

Equipment Type	Model Number
Food Warmers	SFW2S, SFW3M, SFW4L.

Application of Territory Legislation & Council Directives(s)	
<p>This Declaration of Conformity is issued under the sole responsibility of the importer: Adexa Direct Limited. For the object of this declaration, the essential requirements and principal safety objectives have been demonstrated.</p> <p>The object of this declaration conforms to the following statutory requirements and Union harmonisation legislation, and complies with the following harmonised standards:</p> <p>1. Low Voltage Directive 2014/35/EU The Electrical Equipment (Safety) Regulations 2016 EN 60335-1:2012 + A11:2014 + A13:2017 + A1:2019 + A2:2019 + A14:2019, EN 60335-2-49:2003 + A1:2008 + A11:2012 + A2:2019, EN 62233:2008</p> <p>2. (Pending) Electro-Magnetic Compatibility (EMC) Directive 2014/30/EU (Pending) Electromagnetic Compatibility Regulations 2016</p> <p>3. (Pending) Restriction of Hazardous Substances Directive (RoHS) 2015/863 amending Annex II to Directive 2011/65/EU (Pending) Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012</p> <p>Disclaimer: This Declaration of Conformity is issued based on the certifications and test reports available at the time of issuing.</p> <p>Pending Documentation: RoHS Compliance Certificates, EMC Compliance Certificates.</p> <p>The evaluation reports for compliance with the EMC Directive 2014/30/EU and the RoHS Directive 2009/125/EC are currently pending. This Declaration of Conformity will be updated upon receipt of the required certificates to confirm full compliance with all applicable EU regulations.</p> <p>By issuing this provisional Declaration of Conformity, we reaffirm our commitment to completing the certification process and ensuring that the product meets all necessary requirements under the relevant EU directives once the remaining documentation is secured.</p>	
Imported By	Adexa Direct Limited
Brand	Adexa
Year of Manufacture	2024




Adexa Direct Limited

Swift House Cosford Lane, Swift Valley Industrial Estate, Rugby, England, CV21 1QN United Kingdom

Telephone: 01788 222 410 Email: support@adexa.co.uk URL: <https://adexa.co.uk>

I, the undersigned, hereby declare that the equipment specified above conforms to the above Territory Legislation, Directive(s) and Standard(s).

Date	22.NOV.2024
Signature	
Full Name	Hakan Baykal
Position	Purchase Manager

