


Meat Slicer

Model: SMS-028

230V/50Hz/180W

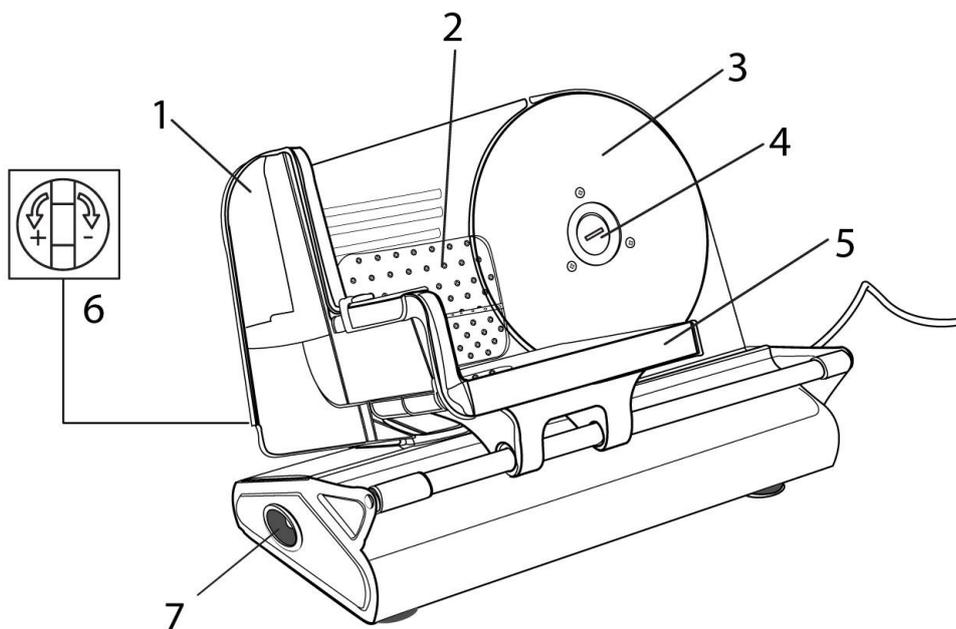

GB

1. Thumb guard
2. Pusher
3. Blade
4. Blade locking device
5. Platform
6. Slices thickness regulation
7. On/off switch

(GB) OPERATING INSTRUCTIONS

IMPORTANT SAFEGUARDS

Please read these instructions carefully before using the appliance.

Important: Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Children shall not play with the appliance. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children

- Check that your mains voltage corresponds to that stated on the appliance.
- Never leave the appliance unsupervised when in use.
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage but have it checked and repaired by a competent qualified service (*). Should the cord be damaged, it must be replaced by a competent qualified service (*).
- Only use the appliance for domestic purposes and in the way indicated in these instructions.
- Never immerse the appliance in water or any other liquid for any reason whatsoever. Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- Before cleaning, always unplug the appliance from the power supply.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
- Make sure the appliance is set on a flat surface.
- Unplug the appliance when not in use.
- Only use this slicer for cooking applications. Only cut articles such as cheese, (boned) meat, bread and preparations. Never cut frozen food with this slicer.
- Never cut food only by using your hands. Always use the slide and its food guide unless it is impossible because of the size and dimension of the article. Make sure never to touch the knife.
- This kind of appliance cannot function continuously, it is not a professional type of appliance. It is necessary to make temporary stops. Check the section «Important information »in the instruction manual.
- The blade of this appliance is extremely sharp, always be very careful when cleaning the appliance.
- It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
- Make sure the appliance is unplugged when disassembling it before cleaning or other.
- Never touch the blade when the appliance is in use. Furthermore, never try to stop the movement of the blade in any way whatsoever.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use

(*) Competent qualified service: After sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

IMPORTANT INFORMATION

This appliance is not for professional use. You should follow the requested breaks. Failure to follow this instruction carefully may result in damage to the motor. Please refer to the rating label for the maximum continuous usage time (KB 10 min is the maximum usage time). The breaks should last at least 30 minutes.

USING THE SLICER

For a safe use, your appliance is fitted with a complete device (platform (5) with a thumb guard (1) and pusher (2)) which allows to protect your hands by giving an exceptional use comfort.

The platform allows to make to and fro motions along the blade to cut the slices. Use the handle to move it.

The pusher allows you to hold the food in position when slicing by holding your hand far from the blade. Therefore it is recommended to always use it except if the food is too large and in this case keep it as far as possible from the blade.

- Clean all parts of the appliance before the first use.
- Make sure the appliance is steady and add the pusher (2) on the platform (5).
- Plug in the appliance. The slicer is now ready for use.
- Place a plate or a dish below the blade to collect the slices.
- Free the platform from the blade and lay the food to be sliced on its stainless steel plate.
- Push the food against the mobile side of the appliance with the pusher (2) and select the slicing thickness by turning the adjusting knob (6).
- Place the switch (7) to the position I. The blade will start rotating and the pilot light of the switch goes on.
- Push the platform to bring the food to the blade (3). Therefore use the handle of the platform and keep the pressure on the mobile side of the appliance thanks to the pusher.
- If it becomes difficult to slice the food (important braking of the blade), move back a little bit and start the operation again by approaching the blade slowly.
- To avoid food sticking to the appliance and to improve the slicing, you can moisten or oil the blade with a wet towel beforehand.

- Do not slice meat with bones, food with large seeds, rolled roast without removing the string, wrappers (i.e. aluminium foil), frozen food or any hard, inedible food parts.

CLEANING

- The switch has to be in "0" position and the appliance has to be unplugged from the power supply before cleaning the appliance
- Wipe the inside and outside of the appliance with a paper towel or a soft cloth. It should not be washed in a dishwasher (the platform tips to make the cleaning easier).
- Do not clean the inside or outside with any abrasive scouring pad or steel wool as this will damage the finish.
- Do not immerse in water or any other liquid.
- Dry all parts well before storage.

PROTECTION OF THE ENVIRONMENT-DIRECTIVE 2012/19/EU



In order to preserve our environment and protect human health, the waste electrical and electronic equipment should be disposed of in accordance with specific rules with the implication of both suppliers and users. For this reason, as indicated by the crossed out wheel bin on the rating label or on the packaging, your appliance should not be disposed of as unsorted municipal waste. The user has the right to bring it to a municipal collection point performing waste recovery by means of reuse, recycling or use for other applications in accordance with the directive.